

Maintenance

2017  
BMW



The Ultimate  
Driving Machine®

**Owner/Driver Information:**

Name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

**Owner/Driver Telephones:**

Business \_\_\_\_\_

Home \_\_\_\_\_

Model **BMW** \_\_\_\_\_ Year **2017** \_\_\_\_\_

VIN

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Retail/In-Service Date \_\_\_\_\_

Trim Code \_\_\_\_\_ Color Code \_\_\_\_\_

Production Date \_\_\_\_\_

License Plate Number \_\_\_\_\_

**BMW Center Telephone Numbers:**

Offices \_\_\_\_\_

Services \_\_\_\_\_

# Table of Contents

	Page
<b>BMW Service</b> .....	<b>1</b>
Maintaining Your BMW Vehicle .....	1
Maintenance Intervals .....	1
The BMW Maintenance System .....	1
Service Data — Key/Remote Control .....	2
Vehicle Storage .....	2
Engine Oil .....	2
Long-Term Rated Fluids and Oils .....	2
Regular Checks — Vehicle Operator .....	3
<b>Maintenance Service Display Overview</b> .....	<b>3</b>
Screen content information .....	3
iDrive Control Display screen contents .....	3
Symbols .....	4
<b>Quality Certification I</b> .....	<b>4</b>
<b>1200 Mile Running-In Service</b> <b>(indicated as “Break-in Inspection” in the Control Display)</b> .....	<b>5</b>
<b>Maintenance Service Summary</b> .....	<b>6</b>
<b>Diesel Exhaust Fluid (DEF)</b> .....	<b>13</b>
Diesel Particulate Filter .....	13
<b>The BMW Scheduled Maintenance Program</b> .....	<b>13</b>
Qualification .....	13
What is Covered .....	14
What is not Covered* .....	14
Scope of Maintenance .....	14
Additional Exclusions From the BMW Scheduled Maintenance Program .....	15
Maintenance Program Upgrade Option .....	15




## BMW Service

BMW recommends you have your maintenance and repair work performed by an authorized BMW center.

### Maintaining Your BMW Vehicle

A well-maintained vehicle will help safeguard its operational performance, road-safety and its reliability. This is why it is important to follow and perform BMW's recommended periodic vehicle inspections and maintenance service tasks as indicated by your vehicle's Maintenance Service Display, along with the other maintenance work described in this booklet.

 Damage, including consequential damage, which results from lack of or improper maintenance is not covered under the BMW New Vehicle Limited Warranty for Passenger Cars and Light Trucks. ◀

### Maintenance Intervals

Maintenance intervals on motor vehicles were conventionally based solely on a fixed time period or a specified amount of accumulated driving mileage.

However, operational and driving conditions have a major influence on your vehicle's routine maintenance requirements; the distance traveled is only one of these significant factors. A vehicle used for short trips in the city with numerous cold starts, prolonged periods of idling, stop-and-go driving, and high engine speeds during acceleration may require more frequent maintenance intervals than a vehicle that is driven long distances at moderate engine speeds.

Your BMW vehicle uses sensors and algorithms together with the elapsed time and the driving distance/profile to monitor and evaluate your vehicle's maintenance service needs. This information is then used to adapt dynamically the parameters used to forecast the applicable maintenance service task intervals.

### The BMW Maintenance System

All BMW vehicles are equipped with an integrated BMW Maintenance System. This

maintenance "reminder" system helps ensure that the vehicle inspections and maintenance service tasks are performed at the forecasted intervals that apply to your vehicle.

The BMW Maintenance System display provides the vehicle operator access to the current status information for the following maintenance service tasks:

- ▷ Engine oil (date and miles)
- ▷ Vehicle check (date and miles)
- ▷ Front brake pads (miles)
- ▷ Rear brake pads (miles)
- ▷ Brake fluid (date)
- ▷ 1,200 Mile running-in service (miles)  
(Applicable to BMW M vehicles only)

For each specific maintenance service task, either the future date (month/year), remaining miles or both are provided as noted above. The system monitors variable inputs to forecast the intervals and alert the driver when one or more specific maintenances tasks should be performed.

Note: For certain vehicles, the status of the front and rear brake pads will only be observable in the maintenance system's display when there are approximately 2,000 miles or less remaining before a brake service will be required to be performed.

For information about the vehicle's maintenance system displays, please refer to the Maintenance Service Display Overview section beginning on page 3.

The following "combine with Engine oil" maintenance service tasks may be identified as needing to be performed with a specific occurrence of the "Engine oil" service task (service counter number):

- ▷ Cabin Microfilter(s)
- ▷ Engine air filter(s)
- ▷ Spark plugs
- ▷ Fuel filter (Diesel engines only)
- ▷ Final drive oil (Applicable M vehicles only)
- ▷ Manual transmission fluid (Applicable M vehicles and transmission only)

Although these items do not appear in the BMW Maintenance System's display in the vehicle, these services should be performed when your vehicle's engine oil is changed in accordance with the interval identified by your vehicle's BMW Maintenance System.

For more information on your vehicle's maintenance services requirements, procedures and intervals, please refer the Maintenance Service Summary section beginning on page 6.

The BMW Maintenance System also includes an option to set service reminders for the following state-specific mandatory vehicle inspections, including:

- ▷ Vehicle safety inspection; and/or
- ▷ Emissions test

The corresponding interval data for these inspections can be inputted into the BMW Maintenance System by a service provider; they are not determined by the vehicle.

For your convenience, you may also wish to have your authorized BMW center perform the work necessary to fulfill these state inspection requirements in your area concurrent with the maintenance services specified above when possible.

**Should you request more frequent maintenance service than is indicated by the BMW Maintenance System during the coverage period, the cost of these services will not be covered by the BMW Maintenance Program.**

## **Service Data — Key/Remote Control**

Maintenance service task status information for your BMW vehicle is continually updated and stored in your key/remote control.

Your authorized BMW center can access this data and consult with you about applicable service procedures and tasks for your vehicle.

Therefore, always provide your service consultant with the most recent key/remote control that was used to operate the vehicle when servicing your vehicle at a BMW center.

## **Vehicle Storage**

Disconnecting the battery during periods of long-term vehicle storage will interrupt the calculation of time-dependent maintenance services.

In this situation, BMW recommends that you have all your time-based maintenance services, such as brake fluid, engine oil and cabin microfilter, brought up to the correct date by an authorized BMW center.

## **Engine Oil**

2017 model year vehicles are factory-filled with:

- ▷ BMW approved fully synthetic oil for gasoline engines; or
- ▷ BMW approved fully synthetic oil for diesel engines

**Important note: Diesel engine oils have a different formulation than gasoline engine oils, always ensure that the correct type of engine oil is used.**

Engine oil should be changed when the vehicle's engine is at operating temperature.

If an engine oil service is being performed or you need to add engine oil between changes, please refer to the Owner's Manual for the recommended engine oil for your BMW vehicle.

## **Long-Term Rated Fluids and Oils**

The following systems and assemblies are factory-filled with long-term rated fluid and oil; fluid replacement is only necessary when repairs are being performed (unless otherwise noted):

- ▷ Engine cooling system (antifreeze/coolant)
- ▷ Automatic and manual transmissions (excluding certain M models with manual transmissions)
- ▷ All-wheel drive transfer cases (except when indicated by the vehicle)

## Regular Checks — Vehicle Operator

In addition to the maintenance service procedure information contained in this booklet, BMW recommends that you regularly check (when refueling, for example), and address when necessary, the following items:


- ▷ Washer fluid level
- ▷ Engine oil level
- ▷ Coolant level
- ▷ Brake fluid level
- ▷ Tires — pressure, condition and wear

Please refer to the Owner's Manual for additional information.

## Maintenance Service Display Overview

- ▷ Condition Based Service (CBS)
- ▷ Condition Based Repair (CBR)

### Screen content information

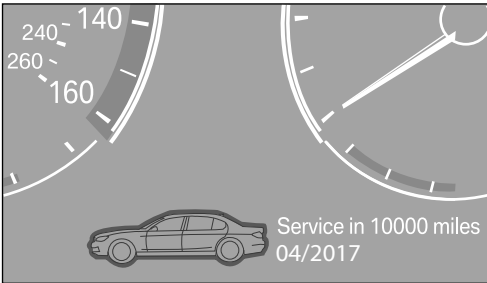

#### General reference; display may appear different

The distance remaining until your next service briefly appears when you switch on the ignition. On 7 Series vehicles, the engine must be running to show the next service.


For certain maintenance operations, you can view the respective distance remaining or due date individually in the Control Display.

## iDrive Control Display screen contents

The current Status of Service items determined by the CBS are shown in the Control Display.


You can also view additional information on the service and maintenance requirements.

1. Open the start menu.
2. Press the controller to open the i-menu.
3. Select "Vehicle Info" ("My vehicle" for 7 Series) and press the controller.
4. If necessary, move the highlight marker. Turn the controller until "Vehicle status" is selected and press the controller.

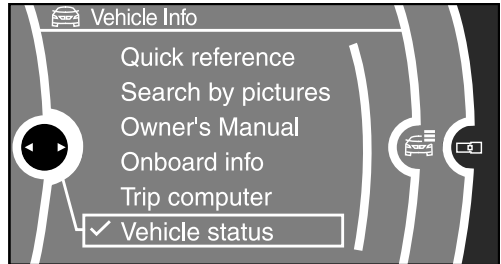

#### General reference; display may appear different

5. If necessary, move the highlight marker. Turn the controller until "Service required" is selected and press the controller.

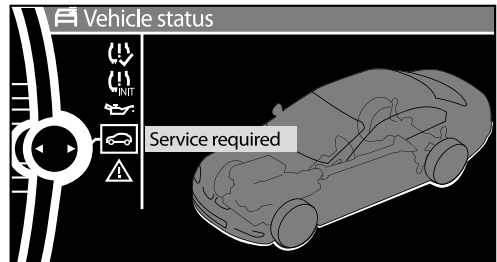

#### General reference; display may appear different

A list of selected maintenance operations and, if applicable, inspections required by law is displayed.


You can request more detailed information on every entry.

Select the entry and press the controller.



**General reference; display may appear different**

To exit from the menu:

Select the  arrow and press the controller.

## Symbols



No service is currently required.



The deadline for service or a state inspection is approaching.\*



The service deadline has already passed.

\*BMW recommends you contact your authorized BMW center for an appointment when this "Service/Information — Approaching Deadline" symbol displays in place of "OK."

The current service status is automatically saved in the vehicle's key. The Service Advisor at your authorized BMW center has a device called a key reader. When your Service Advisor inserts your key into the key reader, all pertinent vehicle and servicing data will be available, and a customized maintenance checklist is printed out based on the specific operations called for by the Condition Based Service.

## Quality Certification I

A pre-delivery "Quality Certification I" inspection is performed on all new BMW vehicles prior to their first delivery.

The Quality Certification I form details a list of items inspected on the vehicle and is provided to the owner at time of the first delivery. A copy of the form is on file with the authorized BMW center that performed this inspection.



## 1200 Mile Running-In Service (indicated as “Break-in Inspection” in the Control Display)

M2, M3, M4, M6, X5 M, X6 M only: The engines in these models are designed for high-performance which includes increased power output and maximum engine speeds compared to a

conventional BMW 2, 3, 4, 6, X5 and X6 engine. The increased power output also affects other major drivetrain components, such as the rear axle differential. On some models, the manual transmission is also affected.

Operation	M2, M3, M4	M6	X5 M, X6 M
<b>1200 mile running-in service</b>			
Change engine oil and oil filter.	All	All	All
Change rear axle differential oil.	All	All	All
Change manual transmission oil.		All	
Bleed intercooler reservoir.	M3, M4		
Deactivate running-in check using diagnostic tool path.	All	All	All

## Maintenance Service Summary

The maintenance service tasks outlined in this section are based on intervals of:

- ▷ Time; and/or
  - ▷ Mileage; or combined with
  - ▷ Performing a specified occurrence of a maintenance service task.
- Your authorized BMW center can utilize the most current applicable maintenance service information to determine which maintenance service inspections and service tasks need to be performed on your vehicle.

Such intervals are primarily determined by the BMW Maintenance System unless otherwise noted in this booklet.

The information contained in this booklet is correct as of the "print date." BMW reserves the right to make changes to the vehicle's maintenance service parameters and intervals due to running vehicle production improvements (among other things).

Your authorized BMW center can utilize the most current applicable maintenance service information to determine which maintenance service inspections and service tasks need to be performed on your vehicle.

<b>Models</b>	<b>2, 3, 4, 6, 7 Series except M and Diesel</b>	<b>M2, M3, M4, M6</b>	<b>3 Series Diesel</b>	<b>X1, X3, X4, X5 except X5 M and Diesel; X6 except X6 M and Diesel</b>	<b>X5 M, X6 M</b>	<b>X3, X5 Diesel</b>
<b>Standard scope</b>						
Verify check control messages.	All	All	All	All	All	All
Check indicator and warning lights.	All	All	All	All	All	All
Reset CBS display.	All	All	All	All	All	All
Inspect tires, adjust tire pressures and reset Tire Pressure Monitor.	All	All	All	All	All	All
Check parking brake functionality while the vehicle is being driven into the workshop.	All	All	All	All	All	All
Charge the high-voltage battery.	330e			X5 xDrive40e		
Check and record the customer's charge setting in the central display.	330e			X5 xDrive40e		

<b>Models</b>	<b>2, 3, 4, 6, 7 Series except M and Diesel</b>	<b>M2, M3, M4, M6</b>	<b>3 Series Diesel</b>	<b>X1, X3, X4, X5 except X5 M and Diesel; X6 except X6 M and Diesel</b>	<b>X5 M, X6 M</b>	<b>X3, X5 Diesel</b>
<b>Engine oil service</b>						
Change engine oil and oil filter.	All	All	All	All	All	All
Top up Diesel Exhaust Fluid.			All			All
<b>Maintenance services not shown in CBS display</b>						
<b>Every 2nd engine oil service (approx. 20,000 mi)</b>						
Replace ventilation microfilter.	All	All	All	All	All	All
<b>Every 3rd engine oil service (approx. 30,000 mi)</b>						
Replace air filter element (more often in dusty conditions).	750i	All	All	X4 xDriveM40i	All	All
Replace spark plugs.		All		X4 xDriveM40i	All	
<b>Every 4th engine oil service (approx. 40,000 mi)</b>						
Replace air filter element (more often in dusty conditions).	240i, 340i, 440i, 740i			X1		
Replace diesel fuel filter.			All			All
<b>Every 5th engine oil service (approx. 50,000 mi)</b>						
Replace air filter element (more often in dusty conditions).	All except: 240i, 340i, 440i, 7 Series			All except: X1, X4 xDriveM40i		
Change fluid in the rear axle differential.		All			All	
Change manual transmission fluid and clean oil filter.		All			All	

<b>Models</b>	<b>2, 3, 4, 6, 7 Series except M and Diesel</b>	<b>M2, M3, M4, M6</b>	<b>3 Series Diesel</b>	<b>X1, X3, X4, X5 except X5 M and Diesel; X6 except X6 M and Diesel</b>	<b>X5 M, X6 M</b>	<b>X3, X5 Diesel</b>
<b>Every 6th engine oil service (approx. 60,000 mi)</b>						
Replace spark plugs.	All			All except: X4 xDriveM40i		
<b>Maintenance services that display in CBS</b>						
<b>Front brakes</b>						
Replace brake pads, clean brake pad contact points in calipers.	All	All	All	All	All	All
Brake discs: Check surface and thickness; replace as necessary.	All	All	All	All	All	All
Optional M Carbon Ceramic Brakes: Visually check for brake disc wear using the surface wear indicators.		All			All	
<b>Rear brakes</b>						
Replace brake pads, clean brake pad contact points in calipers.	All	All	All	All	All	All
Brake discs: Check surface and thickness; replace as necessary.	All	All	All	All	All	All
Optional M Carbon Ceramic Brakes: Visually check for brake disc wear using the surface wear indicators.		All			All	

<b>Models</b>	<b>2, 3, 4, 6, 7 Series except M and Diesel</b>	<b>M2, M3, M4, M6</b>	<b>3 Series Diesel</b>	<b>X1, X3, X4, X5 except X5 M and Diesel; X6 except X6 M and Diesel</b>	<b>X5 M, X6 M</b>	<b>X3, X5 Diesel</b>
Parking brake: Repair or replace parking brake shoes/linings only if a reduction in the brake's effectiveness is noted. When fitted, parking brake shoes/linings are excluded from coverage under the BMW Maintenance Program.	All	All	All	All	All	All
<b>Brake fluid</b>						
Replace brake fluid.	All	All	All	All	All	All
<b>Vehicle check</b>						
Check operation of horn, headlight flasher and hazard warning flashers.	All	All	All	All	All	All
Check instrument and control lighting and heater/air-conditioning blower.	All	All	All	All	All	All
Check lighting system: Turn signals, back-up, license plate, interior (incl. map, reading lights), glovebox, luggage area lights.	All	All	All	All	All	All
Safety belts: Check condition and function.	All	All	All	All	All	All
Check windshield wipers and washer jet positions.	All	All	All	All	All	All

<b>Models</b>	<b>2, 3, 4, 6, 7 Series except M and Diesel</b>	<b>M2, M3, M4, M6</b>	<b>3 Series Diesel</b>	<b>X1, X3, X4, X5 except X5 M and Diesel; X6 except X6 M and Diesel</b>	<b>X5 M, X6 M</b>	<b>X3, X5 Diesel</b>
Tires: Check tread depth, wear pattern, outer condition, inflation pressure (also spare, if equipped). If necessary, correct pressure (also spare).	All	All	All	All	All	All
Reset Tire Pressure Monitor.	All	All	All	All	All	All
12V Battery: Check state of charge (magic eye) and charge, if required.	All	All	All	All	All	All
Power steering reservoir: Check fluid level.	6 Series xDrive	M6				
Visually inspect all SRS airbag units for torn covers, obvious damage or attachment of stickers.	All	All	All	All	All	All
Convertible: Open the convertible top or retractable hardtop. Activate automatic rollover protection system via OBD diagnostic link.	2, 4, 6 Series	M4, M6				
Rear-view mirrors, optional rear-view camera.	All	All	All	All	All	All
Engine coolant: Check fluid level and concentration.	All	All	All	All	All	All
Check coolant level and concentration in both reservoirs (for gasoline engine and electric motor electronics).	330e			X5 xDrive40e		

<b>Models</b>	<b>2, 3, 4, 6, 7 Series except M and Diesel</b>	<b>M2, M3, M4, M6</b>	<b>3 Series Diesel</b>	<b>X1, X3, X4, X5 except X5 M and Diesel; X6 except X6 M and Diesel</b>	<b>X5 M, X6 M</b>	<b>X3, X5 Diesel</b>
Windshield washer and intensive cleaning systems: Check protection level, fluid level; top up if necessary.	All	All	All	All	All	All
Inspect the water drain cavities at the left and right edges of the cowl for build-up of water or leaf debris. Do not remove the cowl covers to inspect. If either drain cavity must be cleared out, invoice separately.	2, 3, 4 Series	M2, M3, M4	3 Series			
Check expiration date on the M Mobility System sealant bottle. Change sealant bottle, if needed.		All			All	
Check the occasional use charging cable for damage (cuts, breakage, deformation), corrosion and wear.	330e, 740e Xdrive			X5 xDrive40e		
Check the charging cable port for damage, corrosion and wear.	330e, 740e Xdrive			X5 xDrive40e		
Brake system connections and lines: Check for leaks, damage and correct positioning.	All	All	All	All	All	All

<b>Models</b>	<b>2, 3, 4, 6, 7 Series except M and Diesel</b>	<b>M2, M3, M4, M6</b>	<b>3 Series Diesel</b>	<b>X1, X3, X4, X5 except X5 M and Diesel; X6 except X6 M and Diesel</b>	<b>X5 M, X6 M</b>	<b>X3, X5 Diesel</b>
Underbody, including all visible parts (i.e., transmission, rear axle, fuel lines, exhaust system): Check for damage, leaks and corrosion.	All	All	All	All	All	All
Steering components: Check for clearance, leaks, damage and wear.	All	All	All	All	All	All
Final inspection: Road test with check of: brakes, steering, shock absorbers (visual), transmission.	All	All	All	All	All	All
<b>Oxygen sensor</b>						
120,000 miles	535i GT, 550i GT, 640i, 650i, ALPINA B6, ALPINA B7	All	All	X5 xDrive40e	All	X3 28d, X5 35d
150,000 miles	230i, M240i, 330i, 340i, 430i, 440i, 740i			X1, X5 35i, X5 50i, X6 35i, X6 50i		
120,000 miles OR 150,000 miles, if eligible for California Emissions Warranty	320i			X3 28i, X3 35i, X4 28i, X4 M40i		



## Diesel Exhaust Fluid (DEF)

The 328d, X3 xDrive28d, and X5 xDrive35d vehicles are equipped with the Selective Catalyst Reduction (SCR) technology.

With this technology, a small amount of metered Diesel Exhaust Fluid (DEF) is injected from a reservoir into the vehicle's exhaust system to help reduce the emissions of nitrogen oxides (NOx).

Under normal operating conditions, the volume of DEF in this reservoir should last until the next engine oil service is required and performed. However, under certain conditions, you can deplete the vehicle's DEF reservoir before the required engine oil service is performed.

**Note: DEF fill-ups before an engine oil service is required and performed are not covered under the BMW Maintenance Program.**

The instrument cluster warning lamp will alert you to refill the DEF before the reservoir is depleted, which starts at approximately 1,000 miles remaining before a mandatory DEF refill is required.

### Refill DEF indicator lamp (yellow)



If you continue to drive the vehicle until the remaining mileage reaches "0," a new warning will appear (NO START IN --- MILES). Once this warning appears, you will be able to restart the engine one more time, provided that this is done within three (3) minutes of the last shut off. Beyond this time interval, the engine will not restart until the DEF reservoir is refilled!

### Empty DEF indicator lamp (red)



DEF is available at your authorized BMW center as well as other automotive part retailers. Please refer to your vehicle Owner's Manual for information on refilling the vehicle's DEF reservoir.

## Diesel Particulate Filter

An additional warning lamp in the instrument cluster may illuminate if the diesel particulate filter requires service.

### Diesel particulate filter indicator lamp



## The BMW Scheduled Maintenance Program

Absent a vehicle transfer, a 2017 vehicle purchased from an authorized BMW center in the United States (including Puerto Rico) is covered by the BMW Scheduled Maintenance program for 36 months or 36,000 miles, whichever occurs first.

Coverage begins on the date of first retail sale or the date the vehicle is first placed into service as a sales demonstrator, Aftersales Mobility Program (AMP) Vehicle or BMW Group company vehicle, whichever is earlier (the vehicle's original in-service date).

Any authorized BMW center in the United States (including Puerto Rico) will perform the eligible maintenance services listed in the "What is Covered" section on your vehicle at no expense to you so long as your vehicle qualifies for this coverage.

### Qualification

The BMW Scheduled Maintenance Program coverage, with one exception, is available only to the first purchaser, owner, or lessee and is not transferable\* to subsequent purchaser, owner, or lessees.

\*See the Maintenance Program Upgrade Option section on page 15.

The sole exception to the non-transferability of BMW Scheduled Maintenance Program coverage is that household transfers within the United States (including Puerto Rico) to members of the household of the initial purchaser, owner, or lessee of the vehicle from an authorized BMW center will not result in termination of BMW Scheduled Maintenance Program coverage.

Household transfers are limited solely to transfers to a current or former spouse or spousal equivalent, child, sibling, parent, grandparent, or grandchild from the initial purchaser, owner, or lessee of the vehicle.

In the event of a household transfer, please promptly advise your authorized BMW center to document and confirm the household transfer for purposes of the BMW Scheduled Maintenance Program coverage.

The payoff of a loan on a vehicle by the initial purchaser and the purchase of a leased vehicle by the initial lessee are not considered transfers for purposes of the BMW Scheduled Maintenance Program coverage.

## What is Covered

The BMW Scheduled Maintenance Program covers the following factory-recommended maintenance services when they are identified as needing to be performed by the BMW Maintenance System:

- ▷ Engine oil (including the oil filter)
- ▷ Brake fluid (Replacement)
- ▷ Vehicle check (Inspection)
- ▷ 1,200 Mile running-in service (Applicable BMW M vehicles only: Break-in inspection)

And, in conjunction with one or more of the items listed above, the:

- ▷ Standard scope (Procedure)

Additionally, the following “combine with Engine oil\*\*” maintenance service tasks are also covered when they qualify to be performed:

- ▷ Cabin microfilter(s)
- ▷ Remote control/key battery
- ▷ Engine air filter(s)
- ▷ Spark plugs
- ▷ Fuel filter (Diesel engines only)
- ▷ Final drive oil (Applicable M vehicles only)
- ▷ Manual transmission fluid (Applicable M vehicle transmissions only)

\*\*As determined by the vehicle’s maintenance system “Engine oil” service counter “number.”

If a covered maintenance service task’s procedure specifies the inspection of components with a performable adjustment, when required and in conjunction with performing this maintenance service, these adjustments are also covered.

For more information on your vehicle’s maintenance services requirements, procedures, intervals, please refer to the Maintenance Service Summary section beginning on page 6.

## What is not Covered\*

The BMW Scheduled Maintenance Program does not cover the following:

- ▷ Front and rear “standard” brake pads and discs (non-drilled/drilled)
- ▷ Front and rear carbon ceramic brake pads and discs
- ▷ Parking brake shoes/linings
- ▷ Wiper blade assemblies and inserts
- ▷ Engine drive belt
- ▷ Manual transmission clutch assembly

\*See the Maintenance Program Upgrade Option section on page 15.

## Scope of Maintenance

Irrespective of the maintenance program coverage that applies to your vehicle, to help ensure your vehicle is properly maintained, BMW recommends that you always adhere to the “full scope” of applicable maintenance procedures and instructions specified in the Maintenance Service Summary section beginning on page 6 in this booklet.

Maintenance service tasks not covered by the maintenance program can be performed by an authorized BMW center at your expense upon your approval.

You are free to have maintenance service tasks performed by other service facilities. However, any service performed by someone other than an authorized BMW center is not eligible for reimbursement under the BMW Maintenance Program.

While you may elect to use non-genuine BMW parts for maintenance or repair services, BMW is not obligated to pay for repairs of the non-genuine BMW parts or for repairs of any damage resulting from the use of non-genuine parts.

BMW recommends that you keep a record of all maintenance and repairs performed on your vehicle.

### **Additional Exclusions From the BMW Scheduled Maintenance Program**

- ▷ Vehicle safety inspection
- ▷ Vehicle emissions test
- ▷ Oxygen Sensor(s) replacements
- ▷ Maintenance service tasks performed on a vehicle with an ineligible/inactive/expired maintenance program
- ▷ Repairs covered under your New Vehicle Limited Warranty for Passenger Cars and Light Trucks
- ▷ Covered maintenance services task performed by service facilities other than an authorized BMW center in the United States and Puerto Rico
- ▷ Engine oil services and other covered maintenances service tasks including the “combined with Engine oil” services that are performed before they qualify or that are performed more frequently than indicated
- ▷ Gasoline and diesel fuel
- ▷ Gasoline and diesel fuel additives
- ▷ Gasoline engine fuel filter
- ▷ Diesel glow plugs
- ▷ Diesel particulate filter
- ▷ DMTL and NVLD system filters
- ▷ “Topping off” low fluids (e.g., engine oil, coolant system antifreeze, washer fluid, etc.) except when done in conjunction with a covered scheduled maintenance service (as outlined in the customized maintenance checklist printout)

- ▷ Diesel Exhaust Fluid (DEF) top-ups except when done in conjunction with a covered scheduled maintenance (328d, X3 xDrive28d and X5 xDrive35d only, as outlined in the customized maintenance checklist printout)
- ▷ Tires and wheels/rims
- ▷ Wheel alignment, tire balancing and rotation
- ▷ Tire Pressure Monitor (TPM) reset except when done in conjunction with a covered scheduled maintenance service (as outlined in the customized maintenance checklist printout)
- ▷ Wear and tear of soft trim items, such as: seats, carpets, moldings, headliner, door panels and all chrome trim
- ▷ Damage, including consequential, which results from negligence, improper operation of the vehicle, wear and tear or deterioration due to driving habits or conditions, improper repair, environmental influences, flood, accident or fire damage, road salt corrosion, alteration, installation of non-genuine BMW parts or accessories, or use of improper, poor-quality or contaminated fuel
- ▷ Altered or unreadable Vehicle Identification Number (VIN) or odometer irregularities or vehicles where the true mileage cannot be determined
- ▷ Maintenance services or repairs performed after a vehicle is deemed a total loss or sold for salvage
- ▷ Vehicles used in competitive events

### **Maintenance Program Upgrade Option**

BMW recommends you contact your authorized BMW center regarding the availability and purchase of a maintenance program upgrade (adding transferability, enhancing and/or extending the program coverage). Vehicle eligibility requirements and coverage exclusions apply.

**Notes:**

**Notes:**

**Notes:**

**Notes:**

**Notes:**



**Notes:**

**Notes:**

More about BMW



The Ultimate  
Driving Machine®

bmwusa.com  
1-800-334-4BMW

© 2016 BMW of North America, LLC  
Woodcliff Lake, New Jersey 07677  
The BMW name, model names and logo are registered trademarks.  
Printed in U.S.A. 02/16

01 00 2 152 197



European vehicles and products may be shown.